


# 660 EF/EFO

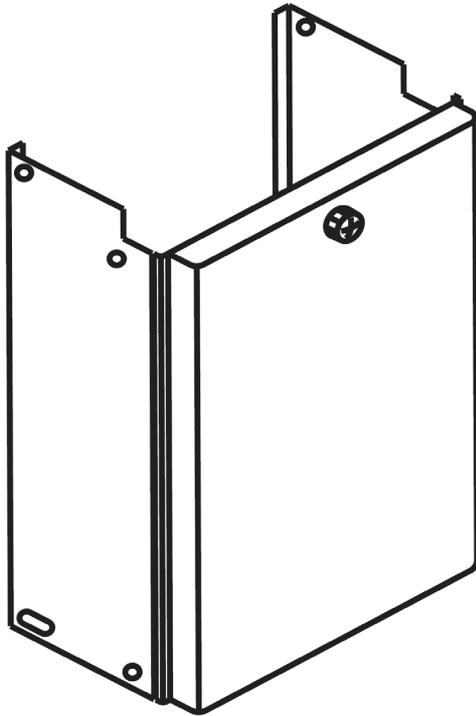

Part no. BPACKIT



**Warning:** This kit must be installed by a qualified installer in accordance with these instructions and all applicable codes and requirements of the authorities having jurisdiction.



**BOSCH**



# 1 Installation


This pipe cover kit includes:

Part No.	Part	Q'ty	Part No.	Part	Q'ty
①	Side cover (left/right)	1 each	⑥	Panel screw	2
②	Pipe front cover	1	⑦	Truss screw small	2
③	Pipe cover top	1	⑧	Tapping screw with PW	6
④	Pipe cover bottom front	1	⑨	Phillips head screw	2
⑤	Pipe cover bottom rear	1	⑩	Wall anchor	2

Refer to the illustration below for installing the pipe covers.

## Installation

Refer to the illustration below for installing the pipe covers.

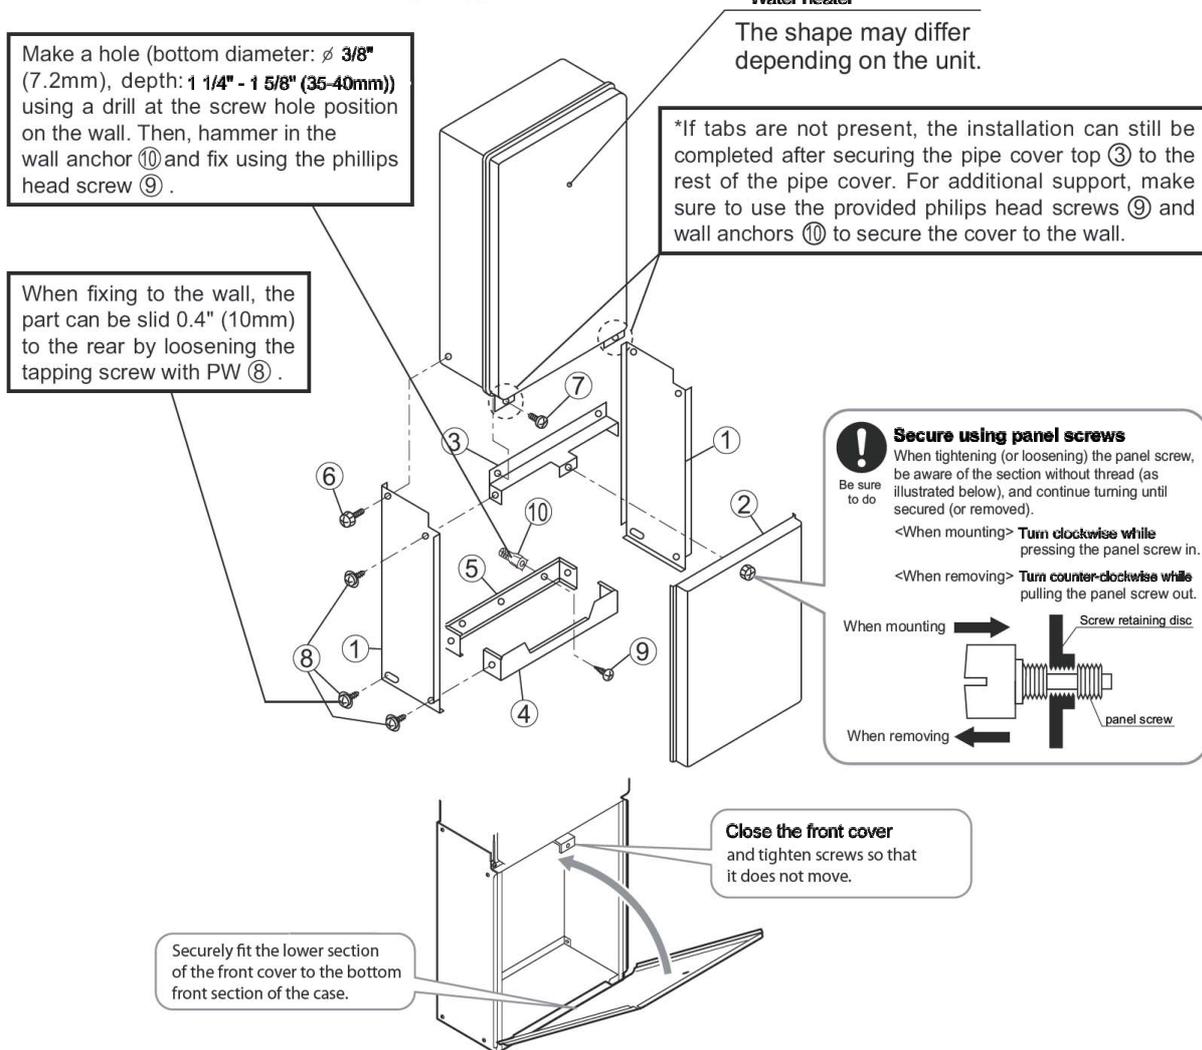

### BOSCH THERMOTECHNOLOGY CORPORATION

50 Wentworth Avenue  
Londonderry, NH 03053  
Tel. 866-330-2730  
www.boschpro.com

Bosch Termotecnologia, SA  
Estrada de Cacia  
3801 - 856 Aveiro - PORTUGAL